Anemometer

Calculating wind speed

I have a three cup anemometer with half spherical cups of 80mm diameter and the cup canters are 155mm from rotation point. if the device turns and 60 rpm, what is the resulting wind speed?

To calculate the wind speed based on the given information for your three-cup anemometer, you can use the formula:

Wind Speed (in meters per second) = $(\pi * D * RPM) / (2 * C)$

Where:

- D is the diameter of the cups (in meters)
- RPM is the revolutions per minute
- C is the distance from the cup center to the rotation point (in meters)

In your case:

- D = 80mm = 0.08m
- RPM = 60 (revolutions per minute)
- C = 155mm = 0.155m

Plugging in the values into the formula:

```
Wind Speed = (\pi * 0.08 * 60) / (2 * 0.155)
```

Simplifying the equation:

Wind Speed ≈ 7.307 m/s

Therefore, with a rotation speed of 60 RPM, the resulting wind speed would be approximately 7.307 meters per second.

interrupt-driven counter

To create an interrupt-driven counter on a Raspberry Pi using GPIO pins, you can follow these steps:

Import the required libraries

```
import RPi.GPIO as GPIO
import time
```

Set up the GPIO mode and initialize the counter variable

```
```python GPIO.setmode(GPIO.BCM) counter = 0 ```
```

### Set up the GPIO pin for input and configure the interrupt

```
GPIO.setup(pin_number, GPIO.IN, pull_up_down=GPIO.PUD_UP)
GPIO.add_event_detect(pin_number, GPIO.FALLING, callback=increment_counter)
</cpde>

Note: Replace ''pin_number'' with the GPIO pin number you want to use.

==== Define the callback function to increment the counter ====

<code python>
def increment_counter(channel):
 global counter
 counter += 1
```

### Create a loop to keep the program running

```
try:
 while True:
 time.sleep(1)
except KeyboardInterrupt:
 GPIO.cleanup()
```

This code sets up the GPIO pin as an input with a pull-up resistor and detects falling edge interrupts. When the interrupt is triggered, the increment\_counter function is called, which increments the counter variable. The program then enters an infinite loop, waiting for interrupts.

Remember to replace pin number with the desired GPIO pin number for your application.